


NOTES:

- 1) HOISTWAY DIMENSIONS ARE MINIMUM CLEAR INSIDE DIMENSIONS.
- 2) FOR SEISMIC ZONES 2 AND UP, ADD 4" TO HOISTWAY WIDTH.

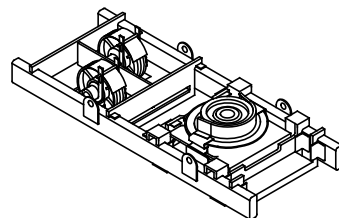

HOISTWAY PLAN


OVERHEAD MACHINE DETAIL

TRACTION MRL:
 FRAME BLDG SUPPORTED
 2500 LB SSSO (RH)

NOT FOR CONSTRUCTION


ALLIANCE
 ELEVATOR SOLUTIONS
 237 OREGON ST.
 MERCERSBURG, PA 17236

| | | |
|--------|--------|------|
| N.T.S. | 1 OF 3 | 2020 |
|--------|--------|------|

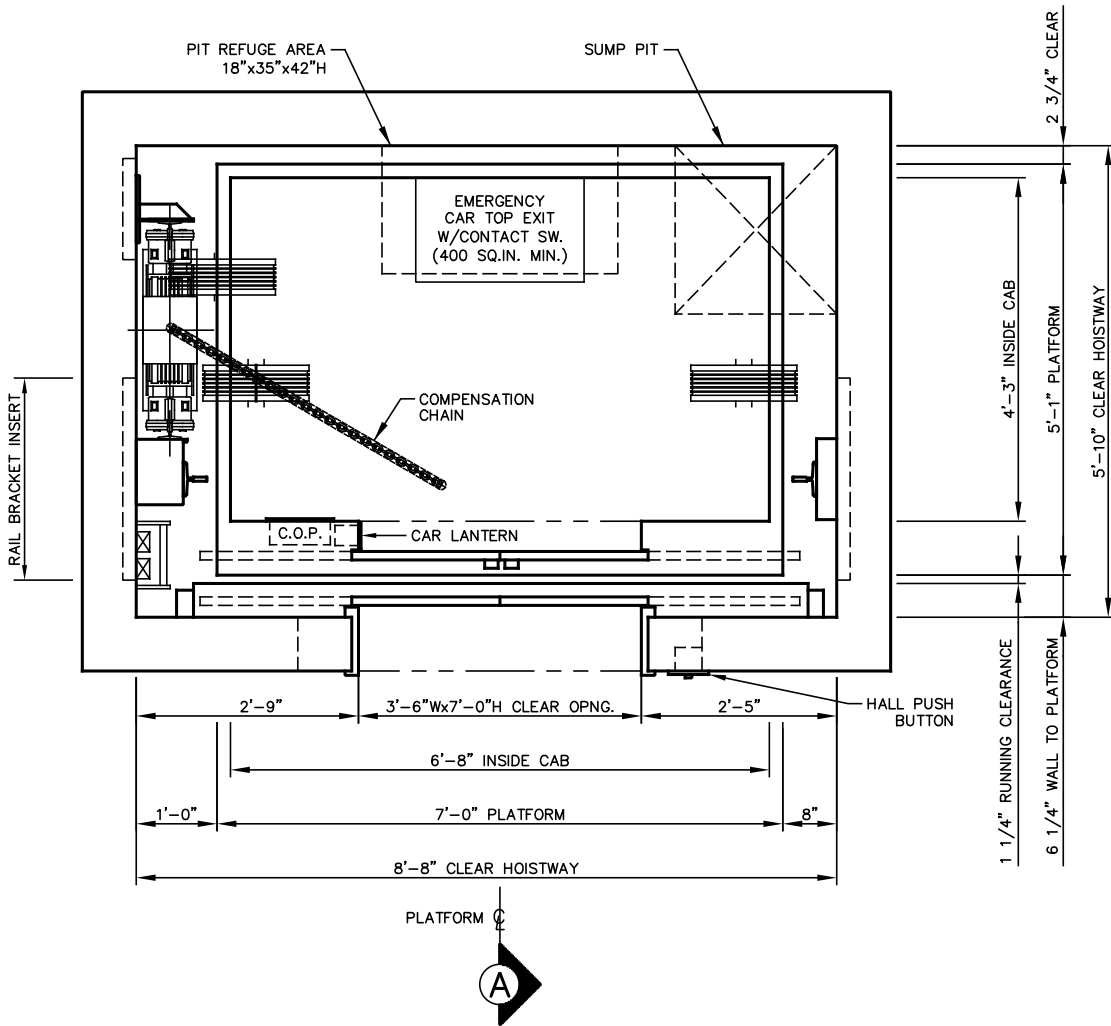

NOTES:

- 1) HOISTWAY DIMENSIONS ARE MINIMUM CLEAR INSIDE DIMENSIONS.
- 2) FOR SEISMIC ZONES 2 AND UP, ADD 4" TO HOISTWAY WIDTH.

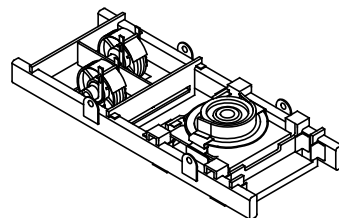

HOISTWAY PLAN

OVERHEAD MACHINE DETAIL



TRACTION MRL:
 FRAME BLDG SUPPORTED
 2500 LB SSC0

NOT FOR CONSTRUCTION

ALLIANCE
 ELEVATOR SOLUTIONS
 237 OREGON ST.
 MERCERSBURG, PA 17236

| | | |
|--------|--------|------|
| N.T.S. | 2 OF 3 | 2020 |
|--------|--------|------|

WHEN NO FULLY BODY ENTRY INTO OVERHEAD, GOVERNOR AND MACHINE BRAKE REQUIRE 24" x 24" ACCESS DOOR

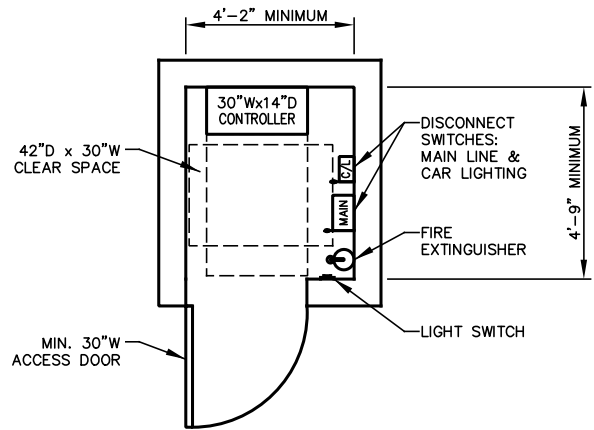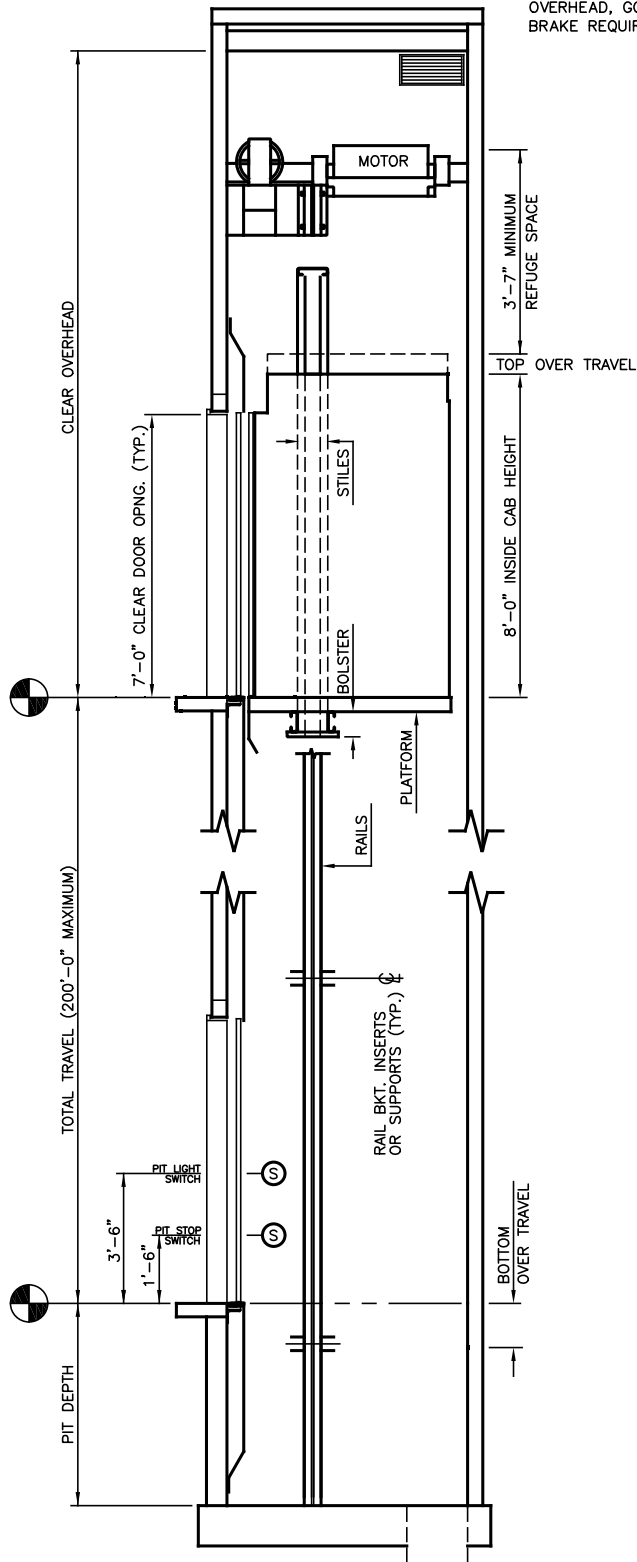

CONTROLLER ROOM

BY DEFAULT CONTROLLER ROOM IS LOCATED ON THE TOP LANDING ADJACENT TO THE HOISTWAY

PIT & OVERHEAD BASED ON CAR SPEED AND CAPACITY

| SPEED (FPM) | PIT | CAPACITY (LB) | | | |
|-------------|-------|---------------|---------|---------|---------|
| | | 2100 | 2500 | 3000 | 3500 |
| 100 | 5'-0" | 14'-5" | 14'-5" | 14'-9" | 14'-9" |
| 150 | 5'-0" | 14'-5" | 14'-5" | 14'-9" | 14'-9" |
| 200 | 5'-0" | 14'-9" | 14'-9" | 14'-10" | 14'-10" |
| 250 | 5'-6" | 14'-10" | 14'-10" | 14'-11" | 14'-11" |
| 300 | 5'-6" | 14'-11" | 14'-11" | 15'-0" | 15'-0" |
| 350 | 5'-6" | 15'-5" | 15'-5" | 15'-6" | 15'-6" |

NOTE: OIL BUFFERS REQUIRED FOR CAR SPEED ABOVE 200 FPM. SPRING BUFFERS MAY BE USED FOR 200 FPM AND BELOW.

SECTION "A"

NOT FOR CONSTRUCTION

ALLIANCE
 ELEVATOR SOLUTIONS
 237 OREGON ST.
 MERCERSBURG, PA 17236